


How to enable USB connection between your Nor145 & NorConnect

STEP A: Nor145


To connect to the Nor145 via USB to PC.

1. On your Nor145, go to SETUP>COMMUNICATION>
2. Make sure the USB option has a static IP set as **10.150.150.1** with the **tick**.

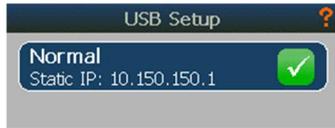

STEP B: NorConnect

1. Click the **information icon** in the top right of NorConnect.
2. **Install the drivers** for your PC by clicking 'Initialize'.

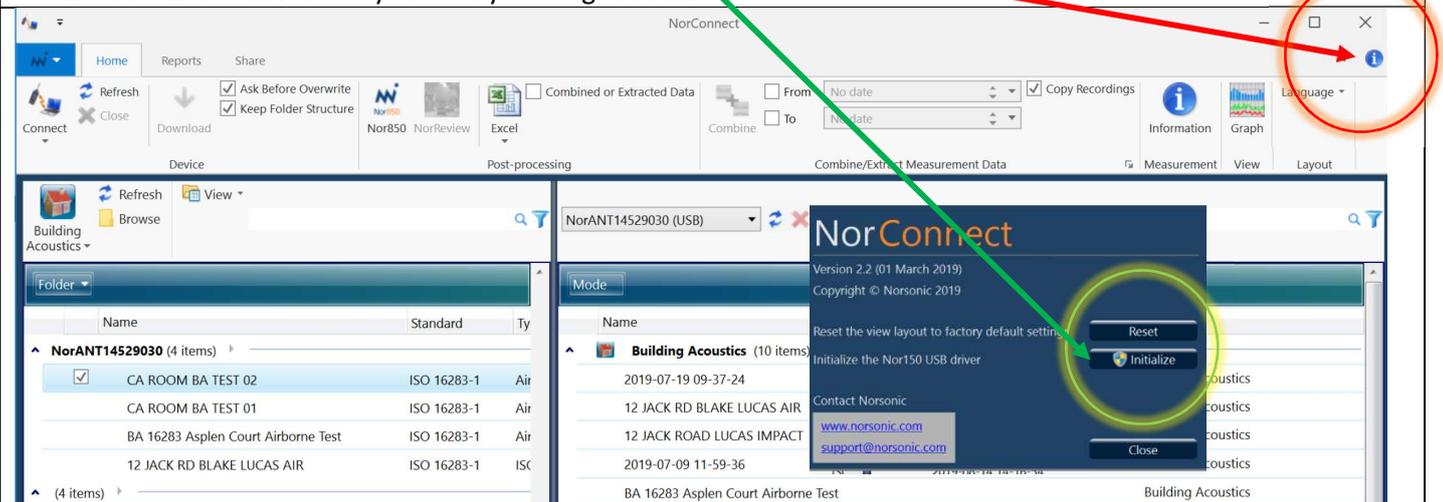

3. In the top left of NorConnect, **click the Connect icon** and enter the IP address on the meter. This is **10.150.150.1** and press Connect

