




Download via SD card, LAN or WiFi using NorConnect

Go to Norsonic.com to download the application



How to download measurement:

1. Insert SD card
2. Drag across measurement to left panel
3. Double click to view measurement in NorConnect or
4. Press the NorReview button to open the measurement in NorReview. Hint: If you can't see the graph, zoom in or out.

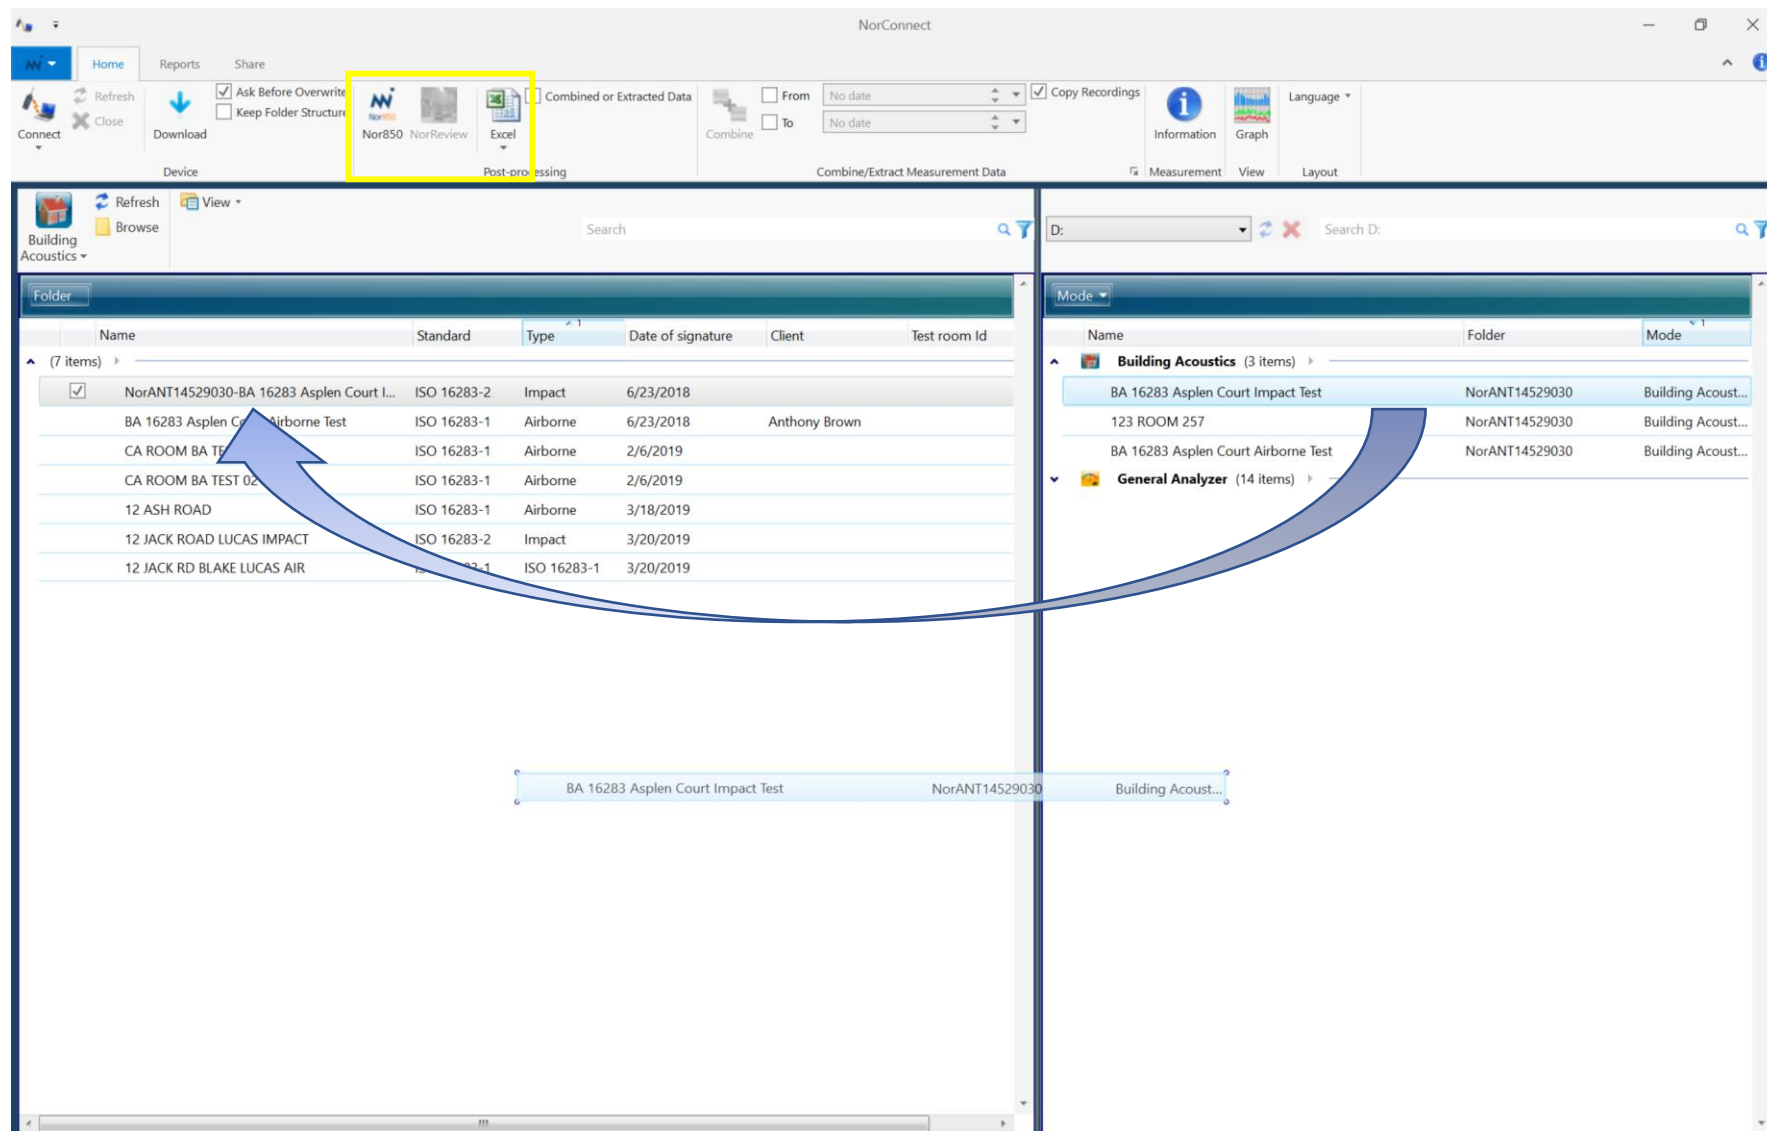

The screenshot shows the NorConnect software interface. The top ribbon includes 'Home', 'Reports', and 'Share'. The 'Post-processing' section has buttons for 'Nor850', 'NorReview', and 'Excel', with 'NorReview' highlighted in a yellow box. The main area is divided into two panels. The left panel shows a table of measurements:

Name	Standard	Type	Date of signature	Client	Test room Id
✓ NorANT14529030-BA 16283 Asplen Court I...	ISO 16283-2	Impact	6/23/2018		
BA 16283 Asplen Court Airborne Test	ISO 16283-1	Airborne	6/23/2018	Anthony Brown	
CA ROOM BA TEST	ISO 16283-1	Airborne	2/6/2019		
CA ROOM BA TEST 02	ISO 16283-1	Airborne	2/6/2019		
12 ASH ROAD	ISO 16283-1	Airborne	3/18/2019		
12 JACK ROAD LUCAS IMPACT	ISO 16283-2	Impact	3/20/2019		
12 JACK RD BLAKE LUCAS AIR	ISO 16283-1	Airborne	3/20/2019		

The right panel shows a detailed view of the selected measurement: 'BA 16283 Asplen Court Impact Test'. A blue arrow points from the selected row in the left table to this detailed view. Below the main interface, a smaller version of the selected measurement is shown in a light blue box.



SD Card

Supports up to 128GB

Requires UHDI speed or greater

Micro SD slot | SD Adapter required